
 


 
 
 
 
 
 








































 
 



































IT: Tabelle di corrispondenza tra il telecomando Meliconi e la configurazione selezionata
FR: Tableaux de correspondance entre la télécommande Meliconi et la configuration sélectionnée
GB: Tables of correspondence between the Meliconi remote control and the selected configuration
DE: Tabellen der Übereinstimmung zwischen der Meliconi-Fernbedienung und der gewählten Konfiguration
ES: Tablas de correspondencias entre el mando a distancia Meliconi y la configuración seleccionada
PT: Tabelas de correspondência entre o controlo remoto do Meliconi e a configuração selecionada

EASY 200	1
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
	
•••	•••
	
	
	
	
	NETFLIX
	RAKUTEN TV
	PRIME VIDEO
	MENU
GUIDE	GUIDE
BACK	BACK
EXIT	EXIT
	
	
	
	
	
INFO	INFO
	
	
	
	
TEXT	TEXT
T.OPT	T.OPT
	
	
	
REC 	REC 
	
	
	
	

EASY 200	2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
	
•••	•••
	
	
	
	
	NETFLIX
	RAKUTEN TV
	PRIME VIDEO
	MENU
GUIDE	GUIDE
BACK	BACK
EXIT	EXIT
	
	
	
	
	
INFO	INFO
	
	
	
	
TEXT	TEXT
T.OPT	T.OPT
	LIST
	SUBT
	Q.VIEW
REC ●	
	Q.MENU
	TV/RAD
