

Thank you for choosing Meliconi.

This universal remote control is used for all the main functions of 2 remote controls (TV and VCR) of the brands listed at the back of the pack.

Keep your Instructions Booklet and Code Booklet for future reference.

USING THE KEYS AND FUNCTIONS

VCR selection key for using the VCR. This key lights up whenever you use a VCR command.

Used to access additional commands and to program the remote control.

Number keys.

To access your MENU. Move within the MENU using the **▲+/-** and **P +/-** keys or **SHIFT** with **▲+/- P +/-** depending on the model of your original remote control.

Control the volume using +/- . These keys can also be used to move to the right and left in the MENU.

To select an external terminal.

User customisation keys for memorising and accessing additional commands.

TV and VCR ON/OFF key.

TV selection key for using the TV. This key lights up whenever you use a TV command.

Teletext keys:

- to access Teletext
- to close Teletext and return to normal viewing
- Teletext page hold function
- additional Teletext function.

Confirm key.

To select the next (**P+**) or previous (**P-**) channel or program. These keys can also be used to move up and down in the MENU.

Mute key.

TV Fastext Func.	VCR	TV Fastext Func.	VCR
-	Record	White/Violet	Additional Func.
Red	Rewind	Blue	Fast forward
Green	Stop	Yellow	Pause
		-	Play

The functions described above are only operative if your appliance also has them.

FITTING THE BATTERIES

Before programming and using the remote control, fit the batteries.

The remote control requires 2 new AAA/LR03 alkaline batteries. Insert the batteries as shown.

- The batteries must be changed once a year.
- If the TV or VCR selection keys start to flash during use, this indicates that the batteries are low and should be changed.
- When you remove the batteries, fit the new ones within 5 minutes or you may have to reprogram your remote control.
- Make a note of the codes for your TV and VCR on the adhesive label inside the battery cover. This note will be handy if you have to reprogram your control.



SET-UP

Read these instructions carefully before programming your remote control!

To program the **CONTROL 2 Plus** remote control, follow the indications in section **A**, **B** or **C**.

A

BRAND SEARCH PROGRAMMING MODE

Warning: program one appliance at a time.

1. Make sure your TV or VCR is ON. For VCRs, make sure a cassette has been inserted.
2. In the code book enclosed, look for the brand of your appliance and make a note of the code indicated at the side (e.g. Philips 001) or the code for the brand indicated by the arrow.
3. Press and release the TV or VCR selection key for the appliance you want to use.
 - the TV key is used to search only for the TVs of the brand selected
 - the VCR key is used to search only for the VCRs of the brand selected.
4. Hold down the SHIFT and ON/OFF keys together until the TV or VCR selection key starts to flash indicating that the remote control is in programming mode.
5. Release the keys, within 15 seconds, enter the brand code previously identified (e.g. 001). The TV or VCR selection key flashes more quickly to indicate that the remote control is ready for the search.
6. Point the remote control at the appliance. Press and release **slowly** one of the most frequently used keys several times **STOPPING** when the appliance responds correctly to the command.
7. When the appliance responds correctly, press SHIFT to confirm. **Three flashes** indicate that the operation has been completed correctly.

Additional check

Check that some of the other functions used on your original remote control are working correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar but different remote control. In this case, repeat the search procedure from **point 3**.

Identify and make a note of the code for the appliance which you have searched for, following the code noting procedure (see "NOTING THE PROGRAMMED CODE" section).

NOTE: THE TV OR VCR SELECTION KEY STOPS FLASHING.

The remote control leaves the programming mode and the TV or VCR selection key stops flashing:

- if no keys are pressed for 15 seconds
- if an invalid brand code is entered
- if the code search list is completed In this case, go back to **point 3** or switch to programming mode **C**
- if you press the TV - VCR - F1 - F2 - F3 - F4 keys by mistake.

B

DIRECT CODE ENTRY

Warning: program one appliance at a time.

1. Make sure your TV or VCR is ON.
For VCRs, make sure a cassette has been inserted.
2. In the code book enclosed, look for the brand of the TV or VCR appliance you want to control and make a note of the first code in the list **BENEATH** the brand previously identified (e.g. Philips TV 103, VCR 345).



3. Press and release the TV or VCR selection key for the appliance you want to use. You cannot set a VCR code using the TV key.



4. Hold down the SHIFT and ON/OFF keys together until the TV or VCR selection key starts to flash indicating that the remote control is in programming mode.



5. Release the keys. Within 15 seconds, enter the code previously identified (e.g. TV103).
Three flashes indicate that the code has been saved correctly.
If not, try the code entry procedure again from **point 3**.

Additional check

Point the remote control at the TV or VCR. Check that the appliance responds correctly to the commands sent. If there is no response or the appliance only responds partially or incorrectly, it is probable that you have used the wrong code. In this case, try the procedure again from **point 3**. This time, however, use the **NEXT CODE** in the list (e.g. 111 for TV).

Make a note of the TV and VCR codes used to program the remote control on the adhesive label inside of the battery cover for rapid consultation.

NOTE: THE TV OR VCR SELECTION KEY STOPS FLASHING.

The remote control leaves the programming mode and the TV or VCR selection key stops flashing:

- if no keys are pressed for 15 seconds
- if an invalid brand code is entered
- if you press the TV - VCR - F1 - F2 - F3 - F4 keys by mistake.

C

GLOBAL SEARCH REMOTE CONTROL PROGRAMMING

This operation may take up to about 20 minutes.

Warning: program one appliance at a time.

1. Make sure the appliance is ON.
For VCRs, make sure a cassette has been inserted
2. Press and release the TV or VCR selection key for the appliance you want to use.
 - the TV key is used to search only for the TVs of the brand selected
 - the VCR key is used to search only for the VCRs of the brand selected.



3. Hold down the SHIFT and ON/OFF keys together until the TV or VCR selection key starts to flash indicating that the remote control is in programming mode.



4. Release the keys. Within 15 seconds, enter the code 000.
The TV or VCR selection key flashes more quickly to indicate that the remote control is ready for the search.

5. Point the remote control at the appliance. Press and release **slowly** one of the most frequently used keys several times **STOPPING** when the appliance responds correctly to the command.



6. When the appliance responds correctly, press SHIFT to confirm. **Three flashes** indicate that the operation has been completed correctly.

Additional check

Check that some of the other functions used on your original remote control are working correctly. If the commands function incorrectly or erratically, you have probably entered a code for a similar but different remote control. In this case, repeat the search procedure from **point 2**.

Identify and make a note of the code for the appliance which you have searched for, following the code noting procedure (see "NOTING THE PROGRAMMED CODE" section).

NOTE: THE TV OR VCR SELECTION KEY STOPS FLASHING.

The remote control leaves the programming mode and the TV or VCR selection key stops flashing:

- if no keys are pressed for 15 seconds
- if the code search list is completed. In this case, start again from **point 2**.
- if you press the TV - VCR - F1 - F2 - F3 - F4 keys by mistake.

NOTING THE PROGRAMMED CODE

Always write down the 3-digit code for your remote control on the label inside the battery cover after running the search and saving the code. This may be useful if you need to reprogram your remote control in the event of accidental cancellation or when you change used batteries.

If you forget to write down the code or use the remote control programming procedures **A** or **C** don't worry!

To find the code for your remote control:

-  Press one of the TV or VCR selection keys for the appliance whose code you want to identify.
-  Hold down the SHIFT and ON/OFF keys together until the TV or VCR selection key starts to flash.
-  Release the SHIFT and ON/OFF keys and then press and release the 1/-- key.
- After a few seconds, the TV or VCR selection key you used, communicates the code by flashing the three numbers separately.

Count the number of flashes for each code number. For example, for the code 306, the key flashes three, zero and six times to give:

 = 3
 = 0
 = 6


- Note this code on the label inside the battery cover for rapid consultation.

USING THE REMOTE CONTROL FOR 2 TVs

You can use the remote control for 2 TVs instead of 1 TV and 1 VCR.

- Look for the code for the first TV, following any of the programming procedures **A**, **B** or **C** described above.
- Make a note of the three-digit code identified.
- Repeat the search for the second TV and make a note of the code.
- Enter the two codes following programming procedure **B** from **point 3**. Start by pressing the TV selection key to enter the code for the first TV and then the VCR selection key to enter the code for the 2nd TV.

VOLUME CONTROL AVAILABLE AT ALL TIMES

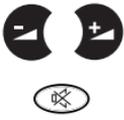

You can raise or lower the TV volume or use the mute function while watching the VCR without having to press the TV selection key.

USING THE ADDITIONAL COMMANDS WHICH DO NOT APPEAR ON THE KEYPAD

Although not indicated on the keypad, some keys can be used for additional commands.

- Use your **CONTROL 2 Plus** remote control to find them by pressing the following keys one by one or together with the SHIFT key:



- The most frequently used additional commands like MENU SCROLL – COLOUR – BRIGHTNESS and NORMALISATION are located as follows:

normalisation



menu (up) 	menu (up)  + 	brightness (-) 	red	brightness (-)  + 	red
menu (down) 	menu (down)  + 	brightness (+) 	green	brightness (+)  + 	green
menu (right) 	menu (right)  + 	color (-) 	yellow	color (-)  + 	yellow
menu (left) 	menu (left)  + 	color (+) 	blue	color (+)  + 	blue


3. FOR THE LESSER-USED FUNCTIONS, refer to the code book appendix.

Find the symbol table corresponding to the code you saved to program the remote control. Locate the additional function you require and note down the symbol or number which appears below it. EXAMPLE: XXX CODE TABLE

Original remote control additional functions				CONTROL symbols or numbers										
REV RIV	TUPO TIME	CANCEL ORA	- [Symbol] +	- [Symbol] +	- [Symbol] +	TP OFF MEM F	TP ON MEM	FULL TOT	EXP TOP	EXP BOT	ALTO I-II			
XXX	* MENU	MENU	◀◀ ■ ▶▶	▶▶	● 015 ▶▶ 014 ▶▶ 014 ● 015	▶▶ 014	● 015	AV	027	028	027			
	MIX	10	Ⓢ											
	030	058	059	◀◀										


There are 4 ways to enable the additional commands:

 A - TV function example: brightness (+)




A symbol appears beneath the function. Locate this symbol on your remote control and press the key to transmit the function to the appliance. The command stops when you release the key.

 C - TV function example: EXP BOT



A number appears beneath the function (028). Press and hold down SHIFT. Type in the number, holding down the last digit (8). The function is transmitted to the TV and stops when you release the two keys (SHIFT+ 8).

 B - TV function example: FULL TOT



A symbol against a grey background appears beneath the function. Locate this symbol on your remote control. Press SHIFT and the key at the same time. The corresponding function is transmitted to the appliance and stops when you release the keys.

D - TV function example: contrast +




A symbol and a number are displayed beneath the function. You can apply the command using either the symbol or the number. Locate this symbol on your remote control and press the key to transmit the function to the appliance. If you want to use the number, refer to example C above.

NOTE:

You cannot use the additional commands unless these were already available on your original remote control.

PROGRAMMABLE KEYS

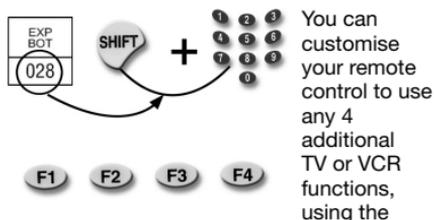

function keys F1- F2 - F3 - F4.

In the symbol table corresponding to your remote control code, locate the additional function you require and note down the number which appears below it. Note that only number functions can be saved using F1- F2 - F3 - F4.

The function programming procedure is as follows:

TV function example: EXP BOT

Press and hold down SHIFT and type in the number written beneath function 028. Press one of the function keys (e.g. F1) and hold it down together with SHIFT. After a few seconds, the TV or VCR selection key for the appliance you have chosen will emit a series of 3 flashes to indicate that the function has been saved correctly. Release SHIFT and F1. From now on, whenever you press F1, the additional command just saved is transmitted to the appliance and stops when F1 is released.

NOTE:

If the TV or VCR selection key does not flash, repeat the saving procedure described above.

TROUBLESHOOTING

PROBLEM

The appliance does not respond and the TV and VCR selection keys do not light up when you press a key.

The appliance does not respond but the TV and VCR selection keys light up.

The TV or VCR selection key is flashing.

The remote control commands are not all working correctly.

The brand for your appliance is not listed in the Code Book.

SOLUTION

Try some of the other frequently used keys. If the problem persists, check that the batteries are fitted correctly. If necessary, replace them with 2 new 1.5 V AAA/LR03 alkaline batteries.

Check that the batteries are new and that the remote control is pointing at the appliance without any obstacles in the way. If required, reset the remote control code, following the programming procedure **A** or **B** or **C**.

The batteries are low. Change them.

You may have used the wrong code. Reset the remote control code, following the programming procedure **A** or **B** or **C**.

Set the remote control code, following the global search programming procedure **C**.

INFO-LINE

If you have any queries about **CONTROL 2 Plus**:

- read this booklet carefully; this will help you to solve almost all problems
- consult our Internet site www.meliconi.it to answer all your queries more easily and quickly.

WARRANTY: 2 years

Tampering or improper product use will void this guarantee.

Remote control model **CONTROL 2 Plus**

Purchase date _____

Agent's stamp