

This simplified universal remote control is used for all the main functions of 2 appliances at the same time, a TV and a VCR (or a DVD) of the brands listed at the back.
Insert the batteries and program your remote control before using it.

Keep your Instructions Booklet for future reference.

USING THE KEYS AND FUNCTIONS

To select the next programme or to turn ON your TV

Press them together to turn ON your TV on **programme 1**

To select an external terminal

Record/Eject DVD

Play

Rewind

Stop

ON/OFF to turn OFF your TV and, in some cases, to turn ON your TV

Control the volume using +/ -

To select the previous programme or to turn ON your TV

Mute key

Videorecorder/DVD ON/OFF key

Fast forward

Pause

FITTING THE BATTERIES

Your remote control requires 2 new AAA/LR03 alkaline batteries. Insert the batteries as shown:

- Batteries must be changed once a year.
- Change the batteries if the light indicator starts to flash during use; batteries are low.
- When removing batteries, insert the new ones within 5 minutes or you may have to reprogram your remote control.
- Make a note of the codes for your TV and VCR/DVD on the adhesive label inside the battery compartment cover. This note will be handy if you have to reprogram your remote control.



SET-UP

Read these instructions carefully before programming your remote control!

To use the remote control with your appliances, you must first program **Speedy 2** as described below. You can also visit our Internet site www.meliconi.it to have access to interactive instructions for easier and faster remote control programming.

**Warning: program one appliance at a time.
This operation may take up to about 20 minutes.**

1. Turn ON the appliance.
If a VCR, insert a cassette.
If a DVD, insert a DVD.
2. Hold down the following keys simultaneously:
- **AV** and **⏏** **if you are programming your TV**,
- **⏏** and **▶** **if you are programming your VCR or DVD**, until the light indicator at the top starts to flash indicating that the remote control is in programming mode.
3. Press key **P** four times then point the remote control at the appliance.
Press and release the following keys **slowly** several times:
- **⏏** **if you are programming your TV**.
STOP when your TV goes OFF.
- **▶** **if you are programming a VCR or DVD**.
STOP when the cassette or DVD starts up.

4. At this point, press the following keys simultaneously:
- **AV** and **⏏** **if you are programming your TV**,
- **⏏** and **▶** **if you are programming your VCR or DVD**.
When you release the keys, **three flashes** indicate that the search operation has been completed correctly.

5. **TV ONLY:**
if you do not have the programme selection keys on your original remote control.

If your original remote control does not have the programme selection keys (e.g. **▶** / **◀**, **+/-**, **CH+/-**, etc) once you have programmed Speedy 2, you can still select the programmes from 0 to 9, as follows:

- Hold down the **AV** and **⏏** keys imultaneously until the light indicator at the top starts to flash indicating that the

remote control is in programming mode.

- Release the keys and press **▶** **8 times** within 12 seconds. **Three flashes** indicate that the operation has been completed correctly.
- Make sure you can change programmes from 0 to 9 using the **▶** and **◀** keys. If not, repeat the search operation, starting from **point 2**.

Additional check

Check that all 7 TV and VCR or DVD keys are operating correctly. If the commands work incorrectly or erratically, you have probably entered a code for a similar but different remote control. In this case, repeat the search procedure from **point 2** until all the keys respond correctly to the commands sent.

Identify and make note of the code for the appliance which you have searched for, following the code noting procedure (see "PROGRAMMED CODE NOTING" section).

NOTE: DURING THE SEARCH OPERATION, THE LIGHT INDICATOR FLASHES MORE QUICKLY. THE LIGHT INDICATOR STOPS FLASHING AND YOUR REMOTE CONTROL LEAVES PROGRAMMING MODE IN THE FOLLOWING CASES:

- if no keys are pressed for 12 seconds
- if you press keys other than those indicated
- if the code search list is completed. In this case, visit www.meliconi.it

PROGRAMMED CODE NOTING

When you have programmed Meliconi Speedy 2, note down the TV and VCR or DVD codes on the label in the battery compartment cover.

To find the code for your remote control, follow the procedure indicated below (once each for your TV and your VCR or DVD):

1. Press the following keys simultaneously:
- **AV** and **⏏** **if you are programming your TV**,
- **⏏** and **▶** **if you are programming your VCR or DVD**, until the light indicator at the top starts to flash indicating that the remote control is searching for the code.
2. Release the keys and, within 12 seconds, press **▶** and **◀** simultaneously.
3. Release **▶** and **◀** and pay attention to the flashing of the LED: a long flash corresponds to a + while a short flash corresponds to a -.
4. Note the sequence of the **8 flashes** and note them down on the label in the battery compartment cover, from left to right, in the appropriate TV and VCR or DVD sections.

RE-PROGRAMMING YOUR REMOTE CONTROL BY ENTERING THE CODE NOTED DOWN

If the remote control is no longer programmed because it has been left without batteries for a long time or has flat batteries, you can re-program it quickly as follows:

1. Hold down the following keys simultaneously:

- **AV** and **⏏** if you are programming your TV,
- **⏮** and **⏭** if you are programming your VCR or DVD,

until the light indicator at the top starts to flash indicating that the remote control is programming.

2. Release the keys and, within 12 seconds, using the **⏮** and **⏭** keys, enter the eight-sign code which you noted down before for your TV or VCR/DVD. At the end, **three flashes** indicate that the code has been saved correctly. If not, try the code entry procedure again from **point 1**.

USING YOUR REMOTE CONTROL

Once you have programmed **Speedy 2**, you can turn ON your TV in three ways:

- Press **⏮** or **⏭**.
- Press **⏻**.
- Press **⏮** and **⏭** simultaneously: this sends the code for **programme 1**.

To return to **programme 1** directly, press **⏮** and **⏭** simultaneously.

Also note that when using your remote control with a DVD, key **⏻** opens the DVD drive.

TROUBLESHOOTING

PROBLEM

The appliance you want to use does not respond and the light indicator does not come ON when you press a key.

The TV or VCR/DVD does not respond but the light indicator does light up.

The TV or VCR/DVD does not respond and the light indicator flashes.

Not all remote control commands are working correctly.

*The **⏮** and **⏭** keys do not select the programmes.*

SOLUTION

Check that the batteries are fitted correctly. If necessary, replace them with 2 new 1.5 V AAA/LR03 alkaline batteries.

Check that the batteries are new and that the remote control is pointing at the appliance without any obstacles in the way. If required, reset the remote control code by repeating the programming procedure.

The batteries are low. Replace them.

You may have used the wrong code. Reset the remote control code, following the programming procedure.

The original remote control may not have had this function. In this case, set the code (press **⏮** 8 times) as described in the **PROGRAMMING YOUR REMOTE CONTROL** section above.

INFO-LINE - If you have any queries about Speedy 2 Meliconi:

- read this booklet carefully – this will help you to solve almost all problems
- consult our Internet site www.meliconi.it to answer all your queries more easily and quickly.

WARRANTY: 2 years

The warranty ceases to be valid if the product is tampered with or used incorrectly.

Purchase date _____

Agent's stamp _____