
 
 



meliconi® **Pratico 2.1 SMART**

Thank you for choosing a Meliconi remote control.

Keep this booklet for future reference

The Pratico 2.1 SMART remote control is designed to command a TV and a DECODER (satellite or digital terrestrial).

IMPORTANT! When the remote control is set to control only one device (example: TV), all the buttons will control that device; whilst when it is set to control 2 devices (TV + DECODER), only the     buttons will control the TV, whilst the other buttons will control the DECODER. (see chapter COMBINED KEYPAD)

Its ergonomic shape and soft rubber body make it easy to grip and protect it from shocks and drops.

By LEARN function, you can capture and store infrared signals from other remotes and match at will to one or more buttons.

It is also designed to be connected to the PC / TABLET / SMARTPHONE via MELICONI audiocable (included in the package) in order to download the latest information to its activation.

The MELICONI remote control reproduces infrared signals corresponding to the original; the functions that operate in radio frequency (e.g. voice commands and pointers) are not supported.

The remote control has a permanent memory, so it does not lose its settings even if there are no batteries in it.



SAFETY WARNINGS


The remote control and batteries should not be exposed to excessive heat such as sunlight, fire or the like.

 
The product **is not a toy**. Keep out of reach of children or domestic animals.

INSERTING THE BATTERIES

The remote control requires 2 new 1.5V **AAA/LR03** alkaline batteries, not included in the package. Insert with the correct polarity as shown in figure.

DO NOT use **rechargeable** batteries.

BATTERIES TEST: Press and hold the  button and check that the LED remains on continuously until the button is released. If the light is off or blinks, the inserted batteries are low, therefore they need replacement.

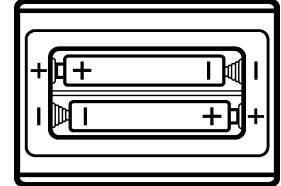


 
Do not leave exhausted batteries inserted, as liquid may leak and damage the remote control

SELECTION OF OPERATING MODE

WARNING:

As the remote control is capable of controlling 2 devices, during setup you must select the operation mode; then define which device you want to control. (TV / STB)

To select the operation mode, press the  button quickly and repeatedly until the LED corresponding to the device you want to operate is switched on. (TV = red led / STB = green led)



ACTIVATION OF REMOTE CONTROL

Before using the remote control, for each device you wish to control, it is **essential** to set a **specific code**, it matched. Identify the specific code and set it into the remote control using one of the following ways:



SMARTPHONE
TABLET - WEB



MANUAL
SEARCH

SMARTPHONE - TABLET - WEB





Use the qr-code on the side or connect to the www.cme.it page and follow the instructions. Once you have found the specific code for your device, set it in the remote control as described in the ENTERING THE CODE DIRECTLY chapter.



MANUAL SEARCH

ATTENTION: searching for the suitable code could last up to 5 minutes.

- Stand in front of the device to be controlled and make sure it is ON (not in stand-by). If necessary, switch it on using the original remote control (if this is still working) or the buttons present on the device itself. (on TVs they can be on the side or the top)
- On the MELICONI remote control [select the operating mode](#) and then press and hold the  button until the LED of the remote control lights up; release.
- Pointing the remote control towards the device, PRESS AND HOLD the **ON/OFF**  button and wait (even up to 5 minutes) for the device to switch off.
- **PAY ATTENTION**, when the device turn off, **IMMEDIATELY RELEASE** the button.
- Three final flashes indicate that the operation has been completed successfully.



VERIFY

Check that the MELICONI remote control operates your device in the main functions; if it does not, **REPEAT** the procedure.


NOTE: When the list of codes to be searched is over, the remote control exits the search and the LED remains off.

If no results are obtained, try using the procedure described in the SMARTPHONE - TABLET - WEB chapter or contact the ASSISTANCE.



ENTERING THE CODE DIRECTLY

(only to be performed if you know the **specific code** to be set)

- On the MELICONI remote control [select the operating mode](#) and then press and hold the  button until the LED lights up; release.
- Immediately enter the previously identified specific code.
- Three final flashes indicate that the operation has been completed successfully.




If the remote control does NOT carry out the three final flashes, the setting is NOT successful; repeat the procedure. If still unsuccessful, it means that the code is not included in the remote control, contact the ASSISTANCE.

RESET THE REMOTE CONTROL

If necessary it is possible to **completely** reset the remote control and bring it back to the initial conditions.


WARNING : All user settings will be lost. Operate as follows:

- On the MELICONI remote control press and hold the  button until the LED lights up; release.
- Enter the code **0100**.
- Three final flashes indicate that the operation has been completed successfully.

The Pratico 2.1 SMART remote control is equipped with Learn technology that can acquire and memorise signals from other infrared remote controls. This feature is particularly useful in several cases.


- To add or change a function connected to a button on the MELICONI remote control.
Having activated the remote control and checked it is working correctly, you may need to add or replace a function on one of the MELICONI remote control buttons with another function you consider to be handier or more frequently used.
- Assign some functions to some buttons to control other devices (example: volume +/- SOUNDBAR).
- To acquire the keypad of an original remote control when a suitable activation code cannot be found.
If no code on the MELICONI remote control is able to command the required appliance properly, you can capture and assign to the various buttons the desired functions of the original remote control.

 
The Pratico 2.1 SMART remote control can learn up to a maximum of **31** signals coming from various original remote controls and connect at will to the desired buttons (even if they have a different use to the one selected).

Signals can also be learnt and set on all the buttons on the MELICONI remote control, except the  button. Obviously the preset functions are lost, but they can be restored by setting again the activation code.



The Learn operation can be repeated numerous times, and the signals captured are kept in the memory even if the batteries are removed or go flat.

• POSITIONING THE REMOTE CONTROLS CORRECTLY.

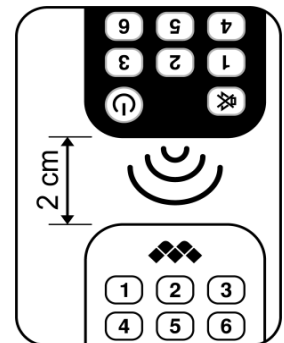- Check that the batteries in both remote controls (the original and the MELICONI remote) are fully charged; if semi-charged batteries are used the signal acquisition procedure may prove difficult or fail completely.
- Position the original remote control in front of the MELICONI remote control so the areas which emit the infrared signals are opposite each other at a distance of approximately 2 cm.
- On the MELICONI remote control [select the operating mode](#), wait a few seconds and then press for a moment the  button.
- Within 30 seconds, press and hold down one of the buttons on the original remote control; the LED on the MELICONI remote control should start flashing; if it doesn't, move the remote controls closer together.
- Gradually move the original remote control away, making sure the two remotes stay aligned, until the point at which the LED stops flashing; then move the remote control to half the previous distance and keep both remotes in this position until the process has terminated.



• CAPTURING SIGNALS.

- On the MELICONI remote control press and hold the  button until the LED lights up; release.
- Press the  button again briefly and immediately press for a moment the button to which to combine the capture signal.
- Press the button on the original remote to be captured, hold it down until the LED goes out and then release it.
IMPORTANT: If after releasing the button the LED comes back on, press the same button again until the LED goes out once more.
- When the signal has been captured correctly the LED will produce three final flashes.

To capture other signals to connect to other buttons, repeat the procedure described above.

Reached the number of records available, the dedicated memory becomes full, preventing further use.


To free memory use one of the following procedures in relation to the data that you want to delete:

- DELETE FUNCTION BY SINGLE BUTTON
- ENTERING THE CODE DIRECTLY
- RESET THE REMOTE CONTROL



BUTTONS AND FUNCTIONS



The functions of the buttons on the MELICONI remote control are only available if the original device is equipped with it.

 
IMPORTANT: sometimes, to switch on the TV, you must hold the  button and press a numeric key.

Sometimes some functions of the original remote control are not directly present on the MELICONI remote control keypad.

To enable them, connect to the www.cme.it page, use the on-line tool ACTIVATION OF REMOTE CONTROL and continue until you see the list matching buttons between the original remote control and the MELICONI remote control.


If the function you want to play is matched with an number in orange color, operate as follows:

- On the MELICONI remote control [select the operating mode](#) and then press and hold the  button.
- When the LED turn on, **without releasing the**  **button**, point the remote control towards the device and enter the previously identified number corresponding to the function you want to get. (at the last digit pressure, the remote control already transmits this function)
- Release the buttons; to match the function obtained to a MELICONI remote control button, within 30 seconds, press and hold the desired button.
- Wait three flashes indicate that storage; release the button. (the used button loses the original function that will be called by setting again the activation code)







DISPLAY CODE IN USE

For any future activation of the remote control, it is advisable to extract and note the code in use, operate as follows:



- On the MELICONI remote control [select the operating mode](#) and then press and hold the  button until the LED lights up; release.
- Enter the code **0010**.
- After a pause of several seconds, the LED produces four sets of flashes, spaced out, corresponding to the code to be obtained. Count the number of flashes. Each set of flashes corresponds to one digit in the code. Ten flashes correspond to the digit zero "0".
(**example** code obtained = **1701**)
- Make a note of the code obtained. You may need it in future.



	= 1
	= 7
	= 0
	= 1

DELETE FUNCTION BY SINGLE BUTTON

If you want to delete the function in combination with a single button, operate as follows:

 
- On the MELICONI remote control [select the operating mode](#) and then press and hold the  button.
- When the LED turn on, **without releasing the**  **button**, enter the code **1600**; release the buttons.
- Within 30 seconds, press and hold the button of which you want to delete the function; wait three flashes indicating the end of the operation, release the button. (to recall the original function, setting again the activation code)



SETTING VIA AUDIOCABLE

Connect the MELICONI remote control to a Personal Computer (Tablet / Smartphone) with Internet access through the appropriate audio cable (included in the package) as shown in figure. Operate as follows:

- Make sure the remote control is equipped with charged batteries.
- Connect the flat end of the cable to the three-pin connector in the battery compartment.
- Connect the jack of the cable to the audio / headphone output PC (green jack socket).
- On the www.cme.it website, use the ACTIVATION OF REMOTE CONTROL tool and follow the instructions.

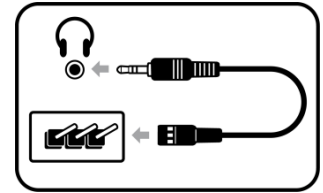

COMBINED KEYPAD

Using the MELICONI remote control to command 2 devices (TV and DECODER) you have a combined keyboard; that is, the keys act only on the TV, while the remaining keys only on the DECODER.

To obtain a function related to the other mode of use, for example the **ON/OFF** function of the DECODER, press and hold the button and press the desired key (+).

 
If desired, it is possible to set the remote control so that it operates constantly in 2 distinct modes of use, which can be selected using the button. Operate as follows:

- On the MELICONI remote control press and hold the button until the LED lights up; release.
- Enter the code **0096**.
- Three final flashes indicate that the operation has been completed successfully.

To return to operate in the combined mode, carry out the procedure using the code **0069**.

CHILD MODE

By activating the **CHILD MODE**, the remote control **only** enables the main functions:



All other functions are blocked.

- On the MELICONI remote control press and hold the button until the LED lights up; release.
- Enter the code **0123**.
- Three final flashes indicate that the operation has been completed successfully.

To restore all the original functions, insert code **0123** on the Meliconi remote control..

TROUBLESHOOTING (F.A.Q.)



! ATTENTION! !

Most problems are caused by using insufficiently charged batteries.
We recommend checking and replace them as shown in the INSERTING THE BATTERIES chapter.

● IF THE REMOTE CONTROL IS NEW AND YOU CAN NOT MAKE IT WORK

It is possible that the code set in the remote control is incorrect for the device that you want to control. Check that you have carried out all the settings procedures correctly. If necessary repeat them, following all the steps indicated carefully. Consult the website www.cme.it to identify the specific code associated with your device or contact the ASSISTANCE.

● IF THE REMOTE CONTROL IS NO LONGER ABLE TO CONTROL THE DEVICE

Disconnect the device from the electric socket and leave it without power for a few minutes; switch the device on again.

Remove the batteries from the remote control, press the **ON/OFF**  button twice and insert NEW batteries.

Make sure that the remote control is pointing at the device without any obstacles between them.

If necessary try to the RESET OF THE REMOTE CONTROL and carry out a new activation.

● IF SOME FUNCTIONS ARE NOT AVAILABLE ON THE REMOTE CONTROL

Usually the MELICONI remote control makes available only the present functions on his keyboard, provided they are available also on the original remote control.

If some of the MAIN functions are not available, you are probably using an incorrect code. Find and set a more suitable code as described in the ACTIVATION OF REMOTE CONTROL chapter.

Sometimes some functions of the original remote control are not directly present on the MELICONI remote control keypad.

To enable them, operate as described in the BUTTON AND FUNCTIONS chapter.

● HOW TO CHECK IF THE REMOTE CONTROL SENDS INFRARED SIGNALS

The human eye is not able to detect infrared signals; use a camera (even that of the mobile phone).

Aim the infrared LED located in front of the remote control (not the red LED above) and press and hold on the remote control the **5** button.

If you see through the camera, the LED light with short white / light blue flashes means that the remote control works and emits infrared.

ASSISTANCE

web: www.cme.it

e-mail: telecomandi@meliconi.com

IMPORTANT! To obtain technical assistance, it is essential to indicate the BRAND and MODEL of the appliance you intend to control and the name of the MELICONI remote control you are using.

WARRANTY: 2 year

Always keep your sales receipt as proof of the validity of the product's warranty. The warranty is voided if the product is tampered with or used improperly.



Meliconi SpA, Via Minghetti 10 - 40057 Cadriano di Granarolo Emilia, (BO) Italy
web: www.meliconi.com email: telecomandi@meliconi.com



The symbol showing a wheelie bin with a cross through it which appears on the device indicates that at the end of its useful life the product must be collected separately from other waste. Therefore, at the end of the device's life, you must take it to appropriate centres for the differentiated collection of electrical and electronic waste, or return it to the retailer when purchasing a new device of equivalent type. Suitable differentiated collection to allow subsequent recycling of the decommissioned device, with environmentally-compatible treatment and disposal, help to prevent any negative effects on the environment and health and to promote the recycling of the materials of which the device is made.



CAUTION: Batteries must not be disassembled, thrown into fire or released into the environment. Improper use can cause damage to the environment and health. The symbol of the bins, indicating that the batteries should be disposed of according to current regulations; inquire on collection of spent batteries and accumulators in force in your country.