

IT: Tabelle di corrispondenza tra il telecomando Meliconi e la configurazione selezionata

FR: Tableaux de correspondance entre la télécommande Meliconi et la configuration sélectionnée

GB: Tables of correspondence between the Meliconi remote control and the selected configuration

DE: Tabellen der Übereinstimmung zwischen der Meliconi-Fernbedienung und der gewählten Konfiguration

ES: Tablas de correspondencias entre el mando a distancia Meliconi y la configuración seleccionada

PT: Tabelas de correspondência entre o controlo remoto do Meliconi e a configuração selecionada

EASY 400	1
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
🔊	🔊
EXIT	EXIT
🔊 +	🔊 +
🔊 -	🔊 -
☰ +	☰ +
☰ -	☰ -
▽	NETFLIX
⤒	YOUTUBE
◊	PRIME VIDEO
ⓘ	INFO
⊕	OPTIONS
⬅	BACK
GUIDE	GUIDE
▶	▶
◀	◀
▲	▲
▼	▼
OK	OK
SMART TV	SMART TV
⌂	MENU
🔴	🔴
🟢	🟢
🟡	🟡
🔵	🔵
TEXT	TEXT
⚙️	⚙️ SETTINGS
▶	▶
■	■
●	●
⤒	⤒
▶▶	▶▶
➡	➡
.Power	.Power

EASY 400	2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
🔊	🔊
EXIT	EXIT
🔊 +	🔊 +
🔊 -	🔊 -
☰ +	☰ +
☰ -	☰ -
▼	NETFLIX
↶	YOUTUBE
◊	PRIME VIDEO
ℹ	INFO
⊕	OPTIONS
←	BACK
GUIDE	GUIDE
▶	▶
◀	◀
▲	▲
▼	▼
OK	OK
✳️	SMART TV
⌂	MENU
🔴	🔴
🟢	🟢
🟡	🟡
🔵	🔵
TEXT	TEXT
⚙️	⚙️ SETTINGS
▶	▶
⏸	⏸
⏹	⏹
●	●
◀	◀
▶	▶
➡	➡
.Power	.Power

EASY 400	3
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Speaker icon	Speaker icon
EXIT	
Speaker + icon	Speaker + icon
Speaker - icon	Speaker - icon
≡ + icon	≡ + icon
≡ - icon	≡ - icon
Red downward arrow icon	
Left arrow icon	
Blue diamond icon	
Info icon	INFO
Options icon	OPTIONS
Back arrow icon	BACK
Guide icon	GUIDE
Up arrow icon	Up arrow icon
Down arrow icon	Down arrow icon
Left arrow icon	Left arrow icon
Right arrow icon	Right arrow icon
OK icon	OK
Wavy line icon	
Home icon	MENU
Red circle icon	Red circle icon
Green circle icon	Green circle icon
Yellow circle icon	Yellow circle icon
Blue circle icon	Blue circle icon
Text icon	TEXT
Settings icon	
Right arrow icon	Right arrow icon
Double vertical bars icon	Double vertical bars icon
Black square icon	Black square icon
Black dot icon	Black dot icon
Left double arrow icon	Left double arrow icon
Right double arrow icon	Right double arrow icon
Open square icon	Open square icon
Power icon	Power icon

EASY 400	4
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Speaker icon	Speaker icon
EXIT	
Speaker + icon	Speaker + icon
Speaker - icon	Speaker - icon
≡ + icon	≡ + icon
≡ - icon	≡ - icon
Red downward arrow icon	
Upward arrow icon	
Blue diamond icon	
Information icon	INFO
Plus icon	OPTIONS
Left arrow icon	BACK
GUIDE	GUIDE
Right arrow icon	Right arrow icon
Left arrow icon	Left arrow icon
Upward arrow icon	Upward arrow icon
Downward arrow icon	Downward arrow icon
OK	OK
Speaker icon	
Home icon	MENU
Red circle icon	Red circle icon
Green circle icon	Green circle icon
Yellow circle icon	Yellow circle icon
Blue circle icon	Blue circle icon
TEXT	TEXT
Settings icon	
Right arrow icon	Right arrow icon
Double vertical bars icon	Double vertical bars icon
Black square icon	Black square icon
Black dot icon	
Left double arrow icon	Left double arrow icon
Right double arrow icon	Right double arrow icon
Open square icon	Open square icon
Power icon	Power icon

EASY 400	5
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
🔊	🔊
EXIT	EXIT
🔊 +	🔊 +
🔊 -	🔊 -
☰ +	☰ +
☰ -	☰ -
▼	
↶	
↷	
ⓘ	INFO
⊕	OPTIONS
↶	BACK
GUIDE	GUIDE
▶	▶
◀	◀
▲	▲
▼	▼
OK	OK
✳️	SMART TV
⌂	MENU
🔴	🔴
🟢	🟢
🟡	🟡
🔵	🔵
TEXT	TEXT
⚙️	
▶	▶
⏸	⏸
⏹	⏹
●	●
◀	◀
▶	▶
➡	➡
.Power	.Power

EASY 400	6
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
🔊	🔊
EXIT	EXIT
🔊 +	🔊 +
🔊 -	🔊 -
☰ +	☰ +
☰ -	☰ -
▼	NETFLIX
↶	
↷	
▢	
ⓘ	INFO
⊕	OPTIONS
↶	BACK
GUIDE	GUIDE
▶	▶
◀	◀
▲	▲
▼	▼
OK	OK
✳️	SMART TV
⌂	MENU
🔴	🔴
🟢	🟢
🟡	🟡
🔵	🔵
TEXT	TEXT
⚙️	⚙️ SETTINGS
▶	▶
⏸	⏸
⏹	⏹
●	●
◀◀	◀◀
▶▶	▶▶
➡	➡
.Power	.Power

EASY 400	7
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Speaker icon	Speaker icon
EXIT	
Speaker + icon	Speaker + icon
Speaker - icon	Speaker - icon
≡ + icon	≡ + icon
≡ - icon	≡ - icon
Red downward arrow icon	
Left arrow icon	
Blue diamond icon	
Info icon	INFO
Plus icon	
Left arrow icon	
GUIDE	GUIDE
Black right arrow icon	Black right arrow icon
Black left arrow icon	Black left arrow icon
Black up arrow icon	Black up arrow icon
Black down arrow icon	Black down arrow icon
OK	OK
Speaker icon	
Home icon	MENU
Red circle icon	Red circle icon
Green circle icon	Green circle icon
Yellow circle icon	Yellow circle icon
Blue circle icon	Blue circle icon
TEXT	TEXT
Settings icon	
Black right arrow icon	
Double vertical bars icon	
Black square icon	
Black dot icon	
Left arrow icon	
Right arrow icon	
Right arrow in square icon	Right arrow in square icon
Power icon	Power icon

EASY 400	8
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
🔊	🔊
EXIT	EXIT
🔊 +	🔊 +
🔊 -	🔊 -
☰ +	☰ +
☰ -	☰ -
▽	NETFLIX
△	YOUTUBE
◊	PRIME VIDEO
ℹ	INFO
⊕	OPTIONS
◀	BACK
GUIDE	GUIDE
▶	▶
◀	◀
▲	▲
▼	▼
OK	OK
✳️	SMART TV
⌂	MENU
🔴	🔴
🟢	🟢
🟡	🟡
🔵	🔵
TEXT	TEXT
⚙️	⚙️ SETTINGS
▶	LIST
⏸	SUBT
■	■
●	
◀	
▶	◀▶
➡	➡
.Power	.Power

EASY 400	9
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Speaker icon	Speaker icon
EXIT	
Speaker + icon	Speaker + icon
Speaker - icon	Speaker - icon
≡ + icon	≡ + icon
≡ - icon	≡ - icon
Red downward triangle icon	
Left arrow icon	
Blue diamond icon	
Info icon	INFO
Options icon	OPTIONS
Back icon	BACK
Guide icon	GUIDE
Right arrow icon	Right arrow icon
Up arrow icon	Up arrow icon
Down arrow icon	Down arrow icon
Left arrow icon	Left arrow icon
OK icon	OK
TV icon	
Home icon	MENU
Red circle icon	Red circle icon
Green circle icon	Green circle icon
Yellow circle icon	Yellow circle icon
Blue circle icon	Blue circle icon
Text icon	TEXT
Settings icon	
Right arrow icon	LIST
Double vertical bars icon	SUBT
Black square icon	Black square icon
Black dot icon	
Left double arrow icon	
Right double arrow icon	Left double arrow icon
Right arrow inside square icon	Right arrow icon
Power icon	Power icon

EASY 400	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
🔊	🔊
EXIT	EXIT
🔊 +	🔊 +
🔊 -	🔊 -
☰ +	☰ +
☰ -	☰ -
▼	
↶	YOUTUBE
◊	
ℹ	
⊕	OPTIONS
←	BACK
GUIDE	GUIDE
▶	▶
◀	◀
▲	▲
▼	▼
OK	OK
✖	
⌂	MENU
🔴	🔴
🟢	🟢
🟡	🟡
🔵	🔵
TEXT	TEXT
⚙	⚙ SETTINGS
▶	
■	
●	
◀	
▶	
➡	
.Power	.Power