



Thank you for choosing a Meliconi remote control.

Before starting to use the product, read carefully and completely this manual and the safety warnings

The Easytel 2+ remote control is designed to command a TV and a DECODER (satellite or digital terrestrial).

The MELICONI remote control reproduces infrared signals corresponding to the original; the functions that operate in radio frequency (e.g. voice commands and pointers) are not supported.

The remote control has a permanent memory, so it does not lose its settings even if there are no batteries in it.

SAFETY WARNINGS

Before using the product, it is recommended to read the safety warnings included in the package and available at the following link:
<https://www.cme.it/meliconi/safety.pdf>




INSERTING THE BATTERIES

The remote control requires 2 new 1.5V **AAA/LR03** alkaline batteries, not included in the package. Insert with the correct polarity as shown in figure.

DO NOT use rechargeable batteries.

BATTERIES TEST: Press and hold the **5** button and check that the LED remains on continuously until the button is released. If the light is off or blinks, the inserted batteries are low, therefore they need replacement.

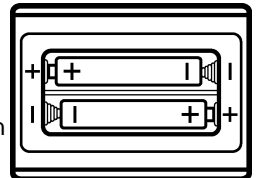


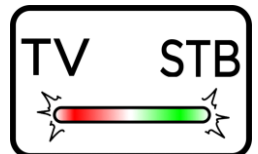
Do not leave exhausted batteries inserted, as liquid may leak and damage the remote control

SELECTION OF OPERATING MODE

WARNING:

As the remote control is capable of controlling 2 devices, during setup (and also during normal use), you must select the operation mode; then define which device you want to control. (TV / STB)

To select the operation mode, press the  button quickly and repeatedly until the LED corresponding to the device you want to operate is switched on. (TV = red led / STB = green led)



ACTIVATION OF REMOTE CONTROL

Before using the remote control, for each device you wish to control, it is **essential** to set a **specific code**, it matched. Identify the specific code and set it into the remote control using one of the following ways:

**SMARTPHONE
TABLET - WEB**

**MANUAL
SEARCH**

SMARTPHONE - TABLET - WEB



Use the qr-code on the side or connect to the www.cme.it page and follow the instructions.

Once you have found the specific code for your device, set it in the remote control as described in the ENTERING THE CODE DIRECTLY chapter.



MANUAL SEARCH

ATTENTION: searching for the suitable code could last up to 5 minutes.

- Stand in front of the device to be controlled and make sure it is ON (not in stand-by). If necessary, switch it on using the original remote control (if this is still working) or the buttons present on the device itself. (on TVs they can be on the side or the top)
- On the MELICONI remote control [select the operating mode](#) and then press and hold the  button until the LED of the remote control lights up; release.
- Pointing the remote control towards the device, PRESS AND HOLD the **ON/OFF**  button and wait (even up to 5 minutes) for the device to switch off or that a shutdown menu appears.
- **PAY ATTENTION**, when the device turn off, **IMMEDIATELY RELEASE** the button.
- Three final flashes indicate that the operation has been completed successfully.



VERIFY


Check that the MELICONI remote control operates your device in the main functions; if it does not, **REPEAT** the procedure.

NOTE: When the list of codes to be searched is over, the remote control exits the search and the LED remains off.

If no results are obtained, try using the procedure described in the SMARTPHONE - TABLET - WEB chapter or contact the ASSISTANCE.

ENTERING THE CODE DIRECTLY

(only to be performed if you know the **specific code** to be set)

- On the MELICONI remote control [select the operating mode](#) and then press and hold the  button until the LED lights up; release.
- Immediately enter the previously identified specific code.
- Three final flashes indicate that the operation has been completed successfully.



If the remote control does NOT carry out the three final flashes, the setting is NOT successful; repeat the procedure.

If still unsuccessful, it means that the code is not included in the remote control, contact the ASSISTANCE.



BUTTONS AND FUNCTIONS

The functions of the buttons on the MELICONI remote control are only available if the original device is equipped with it.

Sometimes some functions of the original remote control are not directly present on the MELICONI remote control keypad.

To enable them, connect to the www.cme.it page, use the on-line tool ACTIVATION OF REMOTE CONTROL and continue until you see the list matching buttons between the original remote control and the MELICONI remote control.



If the functions you want to play are matched with an number in **orange** color, operate as follows:

1. On MELICONI remote control [select the operating mode](#) and then press and hold the button  until the LED turn on; release the button.
2. Enter the code **0707**.
3. While the LED remains on, enter the previously identified number corresponding to the function you want to play.
4. While the LED flashes, within 30 seconds, on the MELICONI remote control press the desired button to match the function obtained.
5. Repeat the procedure from point 3 for each function you want to add on MELICONI remote control.
6. To end the procedure, hold down the  button and wait for three flashes of the LED indicating that the storage has been completed; release the button (the used buttons loses their original function that will be called by setting again the activation code).




DELETE FUNCTION BY SINGLE BUTTON

If you want to delete the function in combination with a single button, operate as follows:





1. On MELICONI remote control select the operating mode and then press and hold the button  until the LED turn on; release the button.
2. Enter the code **0707**.
3. While the LED remains on, enter the code **1600**.
4. While the LED flashes, within 30 seconds, on the MELICONI remote control press the button which you want to delete the function
5. Repeat the procedure from point 3 for each function you want to delete on MELICONI remote control.
6. To end the procedure, hold down the  button and wait for three flashes of the LED indicating that the storage has been completed; release the button (to recall the original functions, setting again the activation code).

DISPLAY CODE IN USE

For any future activation of the remote control, it is advisable to extract and note the code in use, operate as follows:

- On the MELICONI remote control **select the operating mode** and then press and hold the  button until the LED lights up; release.
- Enter the code **0010**.
- After a pause of several seconds, the LED produces four sets of flashes, spaced out, corresponding to the code to be obtained. Count the number of flashes. Each set of flashes corresponds to one digit in the code. Ten flashes correspond to the digit zero "0".
(**example** code obtained = **1701**)
- Make a note of the code obtained. You may need it in future.


 



	= 1
	= 7
	= 0
	= 1


COMBINED KEYPAD





Using the MELICONI remote control to command 2 devices (TV and DECODER) it is often necessary to select the operating mode before to operate on the corresponding device.

To avoid this uncomfortable and frequent operation, it is possible to combine in a single keyboard two different modes of use.

Automatically the  **V+** **V-**   keys will control the TV, while the remaining keys will be the DECODER.

Operate as follows:

- On the MELICONI remote control press and hold the  button until the LED lights up; release.
- Enter the code **0069**.
- Three final flashes indicate that the operation has been completed successfully.

To obtain a function related to the other mode of use, for example the **ON/OFF**  function of the DECODER, press and hold the  button and press the desired key ( + ).


To return to operate in the two distinct mode of use, carry out the procedure using the code **0096**.

CHILD MODE

By activating the **CHILD MODE**, the remote control only enables the main functions:

 **NUMBERS** **V+** **V-** **P+** **P-** **EXIT** 

All other functions are blocked.


- On the MELICONI remote control press and hold the  button until the LED lights up; release.
- Enter the code **0123**.
- Three final flashes indicate that the operation has been completed successfully.

To restore all the original functions, insert code **0123** on the Meliconi remote control.

RESET THE REMOTE CONTROL

If necessary it is possible to **completely** reset the remote control and bring it back to the initial conditions.

WARNING : All user settings will be lost. Operate as follows:


- On the MELICONI remote control press and hold the  button until the LED lights up; release.
- Enter the code **0279**.
- Three final flashes indicate that the operation has been completed successfully.

TROUBLESHOOTING (F.A.Q.)

ATTENTION!

Most problems are caused by using insufficiently charged batteries.

We recommend checking and replace them as shown in the INSERTING THE BATTERIES chapter.

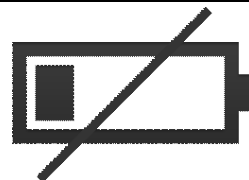

• IF THE REMOTE CONTROL IS NEW AND YOU CAN NOT MAKE IT WORK

It is possible that the code set in the remote control is incorrect for the device that you want to control. Check that you have carried out all the settings procedures correctly. If necessary repeat them, following all the steps indicated carefully.


Consult the website www.cme.it to identify the specific code associated with your device or contact the ASSISTANCE.

• IF THE REMOTE CONTROL IS NO LONGER ABLE TO CONTROL THE DEVICE

Disconnect the device from the electric socket and leave it without power for a few minutes; switch the device on again.

Remove the batteries from the remote control, press the **ON/OFF**  button twice and insert NEW batteries.

Make sure that the remote control is pointing at the device without any obstacles between them.

When pressed (even unintentionally) the  button, you put the remote control to command a certain type of device.

Be sure to operate in the mode corresponding to the device to be controlled; [select the correct operating mode](#) and check if the remote control resumes working.

If necessary try to the RESET OF THE REMOTE CONTROL and carry out a new activation.

• IF SOME FUNCTIONS ARE NOT AVAILABLE ON THE REMOTE CONTROL

Usually the MELICONI remote control makes available only the present functions on his keyboard, provided they are available also on the original remote control.


If some of the MAIN functions are not available, you are probably using an incorrect code. Find and set a more suitable code as described in the ACTIVATION OF REMOTE CONTROL chapter.

Sometimes some functions of the original remote control are not directly present on the MELICONI remote control keypad.

To enable them, operate as described in the BUTTON AND FUNCTIONS chapter.

• HOW TO CHECK IF THE REMOTE CONTROL SENDS INFRARED SIGNALS

The human eye is not able to detect infrared signals; use a camera (even that of the mobile phone).

Aim the infrared LED located in front of the remote control (not the LED above) and press and hold on the remote control the **ON/OFF**  button.

If you see through the camera, the LED light with short white / light blue flashes means that the remote control works and emits infrared.

ASSISTANCE

web: www.cme.it

e-mail: telecomandi@meliconi.com

IMPORTANT! To obtain technical assistance, it is essential to indicate the BRAND and MODEL of the appliance you intend to control and the name of the MELICONI remote control you are using.

WARRANTY: 2 year Always keep your sales receipt as proof of the validity of the product's warranty. The warranty is voided if the product is tampered with or used improperly.

DISPOSAL OF THE PRODUCT

The symbol showing a wheelie bin with a cross through it which appears on the device indicates that at the end of its useful life the product must be collected separately from other waste. Therefore, at the end of the device's life, you must take it to appropriate centres for the differentiated collection of electrical and electronic waste, or return it to the retailer when purchasing a new device of equivalent type. Suitable differentiated collection to allow subsequent recycling of the decommissioned device, with environmentally-compatible treatment and disposal, help to prevent any negative effects on the environment and health and to promote the recycling of the materials of which the device is made.



CAUTION: Batteries must not be disassembled, thrown into fire or released into the environment. Improper use can cause damage to the environment and health. The symbol of the bins, indicating that the batteries should be disposed of according to current regulations; inquire on collection of spent batteries and accumulators in force in your country.



Meliconi SpA, Via Minghetti 10 - 40057 Cadriano di Granarolo Emilia, (BO) Italy
web: www.meliconi.com email: info@meliconi.com

